



Originalfernbedienung Ersatzfernbedienung

	Source	 + 	Shift + AV / Input / RDS
	Power		Power
	List		Smart / List
	TV	 + 	Shift + 1
	DVD	 + 	Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--	 + 	Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC






 


 

 

 

 

 



 

 
 


 
 



Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Mute		Mute / Dimmer
	Red/O Lang		Red / Netflix / Search

 

 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		Shift + Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+ Tv		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol- Tv		Vol-
	PR-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Red(O) Lang		Audio / Lang I/II
	Red(O) Lang		Red / Netflix / Search
	Subtitles		Subtitle / EQ






Originalfernbedienung Ersatzfernbedienung

	Source / Eject		Eject / Surround
	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0 / --		Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	PR -		CH- / Page-
	Mute		Mute / Dimmer
	Red / A-B		Shift + Yellow / YouTube /
	Red / A-B		Red / Netflix / Search



