 

 

 
 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Eject		Eject
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	TV/TXT /		Text
	Cancel / Zoom		Shift + Eject
	Reveal / Subtitle		Shift + Subt
	Hold / Menu		Options
	Size / Angle		Format
	Subpage / Title		Shift + Text
	Index / Goto		Media
	Red / Program		Red

Originalfernbedienung    Ersatzfernbedienung

	Green / Slow		Green
	Yellow / Repeat		Yellow
	Blue / A-B		Blue
	CH +		Ch +
	CH -		Ch -
	TV Menu		Menu
	Source		AV
	Vol +		Vol +
	Vol -		Vol -
	DTV		Smart
	DVD-Setup		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit





Originalfernbedienung Ersatzfernbedienung

	Display	 + 	Shift + Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Picture	 + 	Shift + Format
	Sound		Dual
	Nicam/A2	 + 	Shift + AV
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Info		Info
	Subtitle		Subt
	Channel List		List
	EPG		Guide
	TV / Radio		TV/R
	FAV		Pre Ch

