
 


 
 

 









 




 
 
 
 










Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		D. Menu	
Reveal		List	
Return TV		TV/R	
Text		Text	
Txt Stop		Stop	
Info		Info	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
Red		Red	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Green		Green	
Yellow		Yellow	
Level R/Woofers	 + 	Shift + Right	
Level L	 + 	Shift + Left	
Tone-	 + 	Shift + Ch -	
Mix Scan		3D	
Surround		Dual	
Blue		Blue	
Nicam/Mono	 + 	Shift + Dual	
Store Text	 + 	Shift + Text	
Tone+	 + 	Shift + Ch +	

