



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- +10	 + 	Shift + Guide
	Recall		Back
	V+		Vol +
	V-		Vol -
	Title / Lang		Dual


 


 

 





 
 


 


 
 
 

 
 

 

Originalfernbedienung Ersatzfernbedienung

	EPG / D.Disp		Guide
	P+		Ch +
	P-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	LCD Menu		Menu
	Picture Format / DVD Setup		Format
	Picture Format / DVD Setup		Options
	Source		AV
	PMode	 + 	Shift + Format
	SMode	 + 	Shift + Dual
	Mute		Mute
	Play / Pause		Play
	Play / Pause		Pause

 
 


 
 

 
 

 










Originalfernbedienung Ersatzfernbedienung

	Exit / Stop		Exit
	Exit / Stop		Stop
	Sleep		Sleep
	Nicam Audio		List
	Text / <<		Text
	Text / <<		<<
	FAV Hold / >>		Pre Ch
	FAV Hold / >>		>>
	FAV- / Goto		Media
	Fav+ / Angle		Smart
	Index /  <<		Info
	Index /  <<		<<
	Size / >>		3D
	Size / >>		>>
	Reveal / Zoom		TV/R
	Reveal / Zoom	 + 	Shift + Eject
	Subpage /		Subt

Originalfernbedienung Ersatzfernbedienung

	Red / Program		Red
	Red / Program	 + 	Shift + 1
	Green / Menu		Green
	Green / Menu	 + 	D. Menu
	Yellow / Repeat		Yellow
	Yellow / Repeat	 + 	Shift + Text
	Blue / AB		Blue

