


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Equalizzatore		Shift + Sound / Title
	Surround		Shift + Eject / Surround
	Eject		Eject / Surround
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	Angle		Info / Angle
	4		4
	5		5
	6		6
	Sottotitoli		Subtitle / EQ
	7		7
	8		8
	9		9
	Ricerca		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Canc		Exit / Cancel / Clear
	0/10		0
	10+		Guide / EPG / -/-
	Titolo		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Programm		TV/Radio /
	Down		Down
	Display		Display / Media
	PAL/NTSC		D.Menu / Top
	Setup		Setup / OPT /
	Digest		Shift + D.Menu / Top Menu
	Vol+		Vol+
	Mute		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

	Mark		Fav / Marker / PC
	Zoom		Zoom / Size
	Vol-		Vol-
	A-B		Yellow / YouTube / Repeat
	Ripeti		Back / Return
	Slow		Shift + Play /
	<</F.RWD		<< / Tune-
	F.FWD/>>		>> / Tune+
	I<< / Skip-		I<< / Preset-
	>>I / Skip+		>>I / Preset+
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

