











 



 

 

 



 

 

 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------------------|
|  | Source |  | AV / Input / RDS |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | EPG |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | PRE-CH |  | Back / Return |
|  | HDMI |  | Shift + 0 |
|  | YPbPr |  | Setup / OPT / |
|  | Video |  | Shift + 4 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------------------|
|  | PC |  | Shift + Fav / Marker / PC |
|  | CH+ |  | CH+ / Page+ |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Zoom |  | Zoom / Size |
|  | CH- |  | CH- / Page- |
|  | Dual |  | Audio / Lang I/II |
|  | ADJ Audio |  | Sound / Title |
|  | ADJ Video |  | Picture / Format |
|  | Sleep |  | Sleep / Timer |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu/Exit |  | Menu / Home |
|  | Menu/Exit |  | Exit / Cancel / Clear |



