 


 
 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	TV Audio		TV/R
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 8
	Bluetooth		Shift + 9
	Game		Shift + 5
	AUX2		Shift + 6
	Phono		Guide
	iPod/USB		Shift + 0
	Media Player		Media
	CD		Shift + 7
	Online Music		Smart
	Internet Radio		Pre Ch
	Quick Select 1		D. Menu

**Originalfernbedienung    Ersatzfernbedienung**

	Quick Select 2		Text
	Quick Select 3		Eject
	Quick Select 4		AV
	CH/Page Up		Ch +
	CH/Page Down		Ch -
	Eco		3D
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left




 
 


 

 

 




**Originalfernbedienung Ersatzfernbedienung**

	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	>>I/Tune+		>>I
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4

**Originalfernbedienung Ersatzfernbedienung**

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	TV Audio		TV/R
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 8
	Bluetooth		Shift + 9
	Game		Shift + 5
	AUX2		Shift + 6
	Phono		Guide
	iPod/USB		Shift + 0
	Media Player		Media
	CD		Shift + 7
	Online Music		Smart
	Internet Radio		Pre Ch
	Quick Select 1		D. Menu









 
 

 


 
 
 

 

 

 

 

 



**Originalfernbedienung    Ersatzfernbedienung**

	Quick Select 2		Text
	Quick Select 3		Eject
	Quick Select 4		AV
	CH/Page Up		Ch +
	CH/Page Down		Ch -
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	>>/Tune+		>>I





Originalfernbedienung    Ersatzfernbedienung

	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung    Ersatzfernbedienung






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CBL/SAT	 + 	Shift + 1
	DVD	 + 	Shift + 2
	TV Audio		TV/R
	Blu-ray	 + 	Shift + 3
	AUX1	 + 	Shift + 4
	Tuner	 + 	Shift + 8
	Bluetooth	 + 	Shift + 9
	Game	 + 	Shift + 5
	AUX2	 + 	Shift + 6
	Phono		Guide
	iPod/USB	 + 	Shift + 0
	Media Player		Media
	CD	 + 	Shift + 7
	Online Music		Smart
	Internet Radio		Pre Ch
	Quick Select 1		D. Menu

 





 


 









 
 






 


**Originalfernbedienung    Ersatzfernbedienung**

	Quick Select 2		Text
	Quick Select 3		Eject
	Quick Select 4		AV
	CH/Page Up		Ch +
	CH/Page Down		Ch -
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	>>/Tune+		>>I





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung