



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		Shift + AV / Input / RDS
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	MTS		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Rec List/D.Setup		Setup / OPT /
	Rec List/D.Setup		Smart / List
	CH-		CH- / Page-
	Rec		Rec / Rec Mode





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Freeze		Stop / Hold
	<<		<< / Tune-
	Guide		Guide / EPG / -/-
	>>		>> / Tune+
	Aspect	+	Shift + Picture / Format
	I<<		I<< / Preset-
	Tv/Radio		TV/Radio /
	>>I		>>I / Preset+
	FAV List		Fav / Marker / PC
	Zoom/Index		Zoom / Size
	Angle/Cancel	+	Shift + Exit / Cancel / Clear
	Angle/Cancel		Info / Angle
	Audio/Subpage		Audio / Lang I/II
	Subtitle		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	D.Menu/Reveal		D.Menu / Top
	Size/D.Title	+	Shift + Sound / Title
	Size/D.Title	+	Shift + Zoom /
	Goto/Hold	+	Shift + Stop /
	Goto/Hold	+	Shift + Text /
	Text/D.Display	+	Shift + Display / Media
	Text/D.Display		Text / Goto
	Red/Prog	+	Shift + TV/Radio / Program
	Red/Prog		Red / Netflix / Search
	Green/Step	+	Shift + Pause / Step /
	Green/Step		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Yellow/Repeat	+	Shift + Green / APP /
	Cyan/A-B		Blue / Prime Video / Random
	Cyan/A-B	+	Shift + Yellow / YouTube /

