

 































 







 





 

















 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Mute		Mute / Dimmer
	7		7
	8		8
	9		9
	Goto		Text / Goto
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Audio		Audio / Lang I/II
	OSD		Display / Media
	Angle		Shift + Info / Angle
	Zoom		Zoom / Size
	Return		Back / Return
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	PSM		TV/Radio /
	Play		Play / Slow
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze



