





 
 


 




 




 

 






 


 





Original	Replacement	Original	Replacement
 POWER	 Power	 REPEAT/GREEN/▼	 Green / APP / Repeat
 INFO	 Info / Angle	 7	 7
 HDMI CONTROL	 Smart / List	 8	 8
 SLEEP	 Sleep / Timer	 9	 9
 SCREEN	 Picture / Format	 ROOT/YELLOW	 Yellow / YouTube / Repeat
 SOURCE	 AV / Input / RDS	 RETURN	 Back / Return
 PRESETS	 Setup / OPT /	 0	 0
 1	 1	 MENU	 Menu / Home
 2	 2	 TITLE/BLUE	 Sound / Title
 3	 3	 TITLE/BLUE	 Blue / Prime Video / Random
 ZOOM/RED/▲	 Zoom / Size	 UP	 Up
 ZOOM/RED/▲	 Shift + CH+ /	 LEFT	 Left
 ZOOM/RED/▲	 Red / Netflix / Search	 OK/SELECT	 OK
 4	 4	 RIGHT	 Right
 5	 5	 DOWN	 Down
 6	 6	 P+	 CH+ / Page+
 REPEAT/GREEN/▼	 Shift + CH- /	 P-	 CH- / Page-

Page-



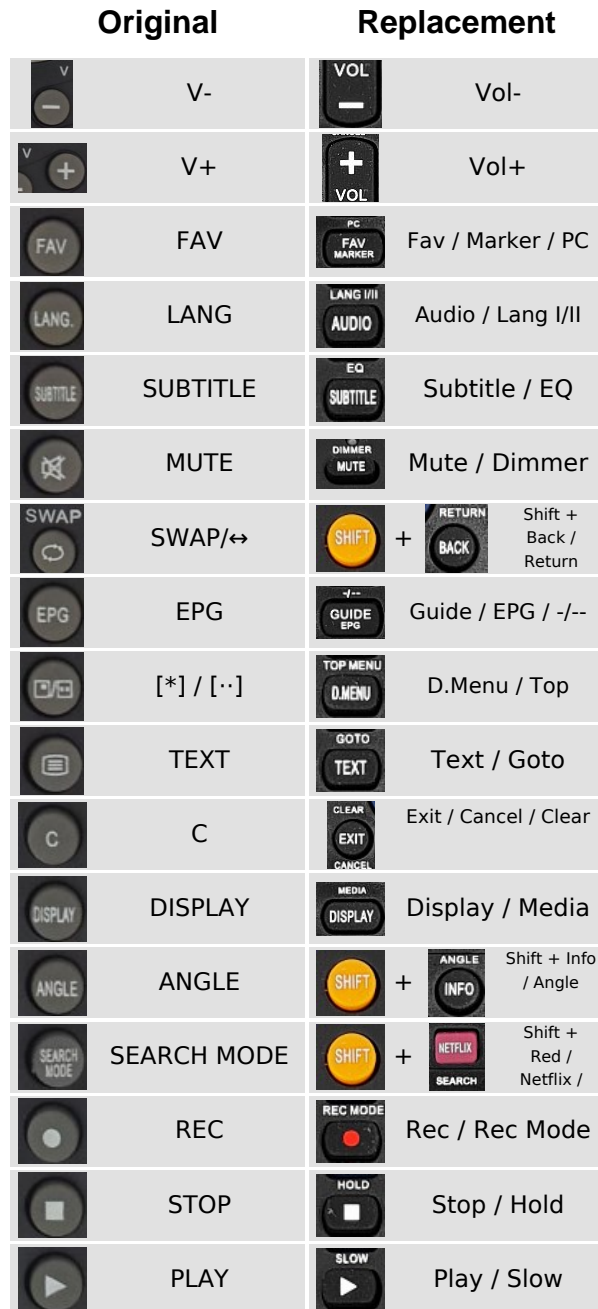

Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW STEP-FREEZE HOLD REC MODE

▶ || ◻ ●

TUNE- TUNE+ PRESET- PRESET+

◀ ▶ ◀ ▶

TITLE LANG UI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/ RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

◀ OK ▶

▲ ▼

CLEAR RETURN

EXIT BACK

CANCEL LIST

+ -

VOL CH PAGE

TV DVD CD- STB

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX- HDD USB BLUETOOTH

7 8 9

↔ HDMI- SAT PC

GUIDE FAV

EPG MARKER

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH REPEAT REPEAT A-B RANDOM

Mandis
shop

www.mandis.tv