










Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 MTS	 Info / Angle
 DTV/ATV	 D.Menu / Top	 Rec List	 Smart / List
 Recall	 Back / Return	 CH+	 CH+ / Page+
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Rec	 Rec / Rec Mode





Original	Replacement
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 <<	 << / Tune-
 >> / Aspect	 >> / Tune+
 >> / Aspect	 Shift + Picture / Format
 I<< / Cancel	 I<< / Preset-
 I<< / Cancel	 Shift + Exit / Cancel / Clear
 >>I / Sub.PG	 >>I / Preset+
 Stop / Index	 Stop / Hold
 Play/Pause / Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Eject / Surround
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search

 
Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

 


 

 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode

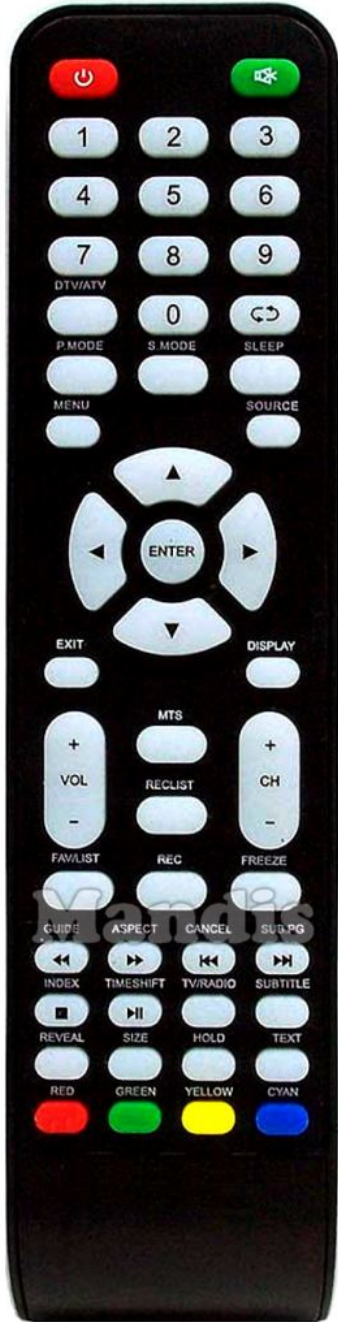



Original	Replacement
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / --
 <<	 << / Tune-
 >> / Aspect	 >> / Tune+
 >> / Aspect	 Shift + Picture / Format
 I<< / Cancel	 I<< / Preset-
 I<< / Cancel	 Shift + Exit / Cancel / Clear
 >>I / Sub.PG	 >>I / Preset+
 Stop / Index	 Stop / Hold
 Play/Pause / Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Eject / Surround
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search

Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

