 


 

 


 



 
 





 
 




 






 
 
 


 



 


 


 
 

 
 



 

 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 I<</UP	 Ch +
 Tv-Out	 AV	 >>/Dn	 Ch -
 1	 1	 Stop	 Stop
 2	 2	 >/Player	 Yellow
 3	 3	 >>/FF	 I<<
 4	 4	 <</REW	 Green
 5	 5	 Enter	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Display	 Info
 Subtitle	 Subt	 Zoom	 Shift + Eject
 Menu	 Menu	 Setup	 Options
 Audio	 Dual	 Rotate	 Back
 Vol+	 Vol +	 Repeat	 Text
 Vol-	 Vol -	 Mute	 Mute





	Original	Replacement	Original	Replacement
	S-Time	 Sleep		
	S-Mode	 Guide		
	DVD	 TV/R		
	Slideshow	 Pre Ch		
	Goto	 Eject		
	Red/Movie	 Rec		
	Blue/Music	 >>		
	Green/Photo	 <<		
	Yellow/File	 Play		

