

 



 

 





 















 



 





 



 















 


 

 






| Original | Replacement | Original | Replacement |
|---|--------------|---|-----------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | S |  | Setup / OPT / |
|  | 0 |  | 0 |
|  | Source |  | AV / Input / RDS |
|  | Menu/Menu |  | Menu / Home |
|  | Guide |  | Guide / EPG / -/-- |
|  | Tv/Fav/Radio |  | TV/Radio / |
|  | Exit/Back |  | Exit / Cancel / Clear |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | PR- |  | CH- / Page- |
|  | [[+] |  | Smart / List |
|  | >[]< |  | Display / Media |
|  | [i+] |  | Info / Angle |
|  | Text |  | Text / Goto |
|  | >/[▼] |  | Shift + >> / |
|  | Play/O/I/II |  | Play / Slow |
|  | <</[≡0] |  | << / Tune- |











 



 



 



 







 







| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  >>/Subtitle |  >> / Tune+ | | |
|  Open/close/[≡?] |  Eject / Surround | | |
|  Stop/[≡+] |  Stop / Hold | | |
|  <</[≡]] |  << / Preset- | | |
|  >> /[≡x]/[O] |  >> / Preset+ | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



 











 



 





 





























 

 







| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | _ Menu/DVD |  | Menu / Home |
|  | - Exit/Back |  | Exit / Cancel / Clear |
|  | - Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |





| Original | Replacement | Original | Replacement |
|---|-----------------------|---|-----------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | - 7 |  | 7 |
|  | - 8 |  | 8 |
|  | - 9 |  | 9 |
|  | 0 |  | 0 |
|  | Source |  | AV / Input / RDS |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | P- |  | CH- / Page- |
|  | Pause / Step / Freeze |  | Pause / Step / Freeze |
|  | Shift + Play / |  | Shift + Play / |
|  | Play / Slow |  | Play / Slow |
|  | << / Tune- |  | << / Tune- |
|  | Shift + << / |  | Shift + << / |
|  | Shift + >> / |  | Shift + >> / |
|  | >> / Tune+ |  | >> / Tune+ |
|  | Eject / Surround |  | Eject / Surround |
|  | Stop / Hold |  | Stop / Hold |
|  | Shift + I<< / Preset- |  | Shift + I<< / Preset- |
|  | I<< / Preset- |  | I<< / Preset- |
|  | Shift + >>I / Preset+ |  | Shift + >>I / Preset+ |
|  | >>I / Preset+ |  | >>I / Preset+ |

