




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 GUIDE	
 PAUSE	 STOP	 EXIT	
 LEFT	 RIGHT	 UP	
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 DISPLAY	 MENU	 INFO
 OK	 OK	 LEFT	 RIGHT
 EXIT	 RETURN	 BACK	
 + VOL	 HOME	 SMART	 + CH
 - VOL	 APP	 MEDIA	 CH -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 FAV	 PRE-CH
 A	 B	 C	 D



Play/Pause



Original	Replacement	Original	Replacement
Blue / Text	Blue		
Red / Zoom	Eject		
Green / Lan/Audio	Dual		
Yellow /	Play		
Yellow /	Pause		
Blue / Text	Text		
<< / Tv/Radio	<<		
<< / Tv/Radio	TV/R		
>> / Subtitle	>>		
>> / Subtitle	Subt		

