




 

 



 

 











 




 

 



 

 
 
 




 





 

 
 









Original	Replacement	Original	Replacement
	Power		Power
	Teletext		Text / Goto
	I-II/Dual		Audio / Lang I/II
	[<>]/[+]		TV/Radio /
	AV/[?]		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[...]/Subtitle		Subtitle / EQ
	[]/Dual/Window		Display / Media
	Cancel		Exit / Cancel / Clear
	Option		Setup / OPT /
	Menu Analog		Menu / Home
	Menu Digital		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Analog/Digital		Shift + D.Menu / Top Menu
	EPG		Guide / EPG / -/-
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Original	Replacement	Original	Replacement
	8		8
	9		9
	[i+] / Info		Info / Angle
	0		0
	P<P		Back / Return
	Ambilight On/Off		Shift + OK
	Ambilight Mode		Shift + Up
	J / Smart Sound		Smart / List
	[] / Smart Picture		Shift + Smart / List

Original	Replacement	Original	Replacement

