






 

 

 





 



 

 

 
 
 

 







 



 

 



 

 



 



 



 



 








Original	Replacement	Original	Replacement
 Power	 Power	 TXT/MIX	 Text
 Sleep	 Sleep	 Play	 Play
 Mute	 Mute	 Pause	 Pause
 Mode	 Media	 Stop	 Stop
 1	 1	 Rec	 Rec
 2	 2	 >>/Index	 >>
 3	 3	 <</Hold	 <<
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Cancel	 Exit
 7	 7	 Menu	 Menu
 8	 8	 DTV/Radio	 TV/R
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Shift + Guide	 Up	 Up
 Back	 Back	 Down	 Down
 Nicam/A2	 Dual	 Right	 Right








 
 






 

 
 


 

 
Original	Replacement
 Left	 Left
 Enter	 Ok
 CH+	 Ch +
 CH-	 Ch -
 FAV	 Pre Ch
 EPG	 Guide
 Info	 Info
 List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Size	 Format
 Reveal	 3D
 Subtitle	 Subt
 Subpage	 AV
 FAV+	 Shift + Ch +

Original	Replacement
 FAV-	 Shift + Ch -



 




 



 



Original	Replacement	Original	Replacement
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Replacement	Original	Replacement
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Replacement	Original	Replacement
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

