














 




 









 
 


 
 


 




 
 


 

 
 
 

 




 







	Original	Replacement		Original	Replacement
	Power		Power		Remain
	DVD		Blue		Cancel
	Tuner		Green		I<<
	USB		Yellow		>>I
	AUX		Red		<<
	Open/Close		Eject		>>
	Sleep		Sleep		Stop
	1		1		Play
	2		2		Pause
	3		3		Step
	4		4		Repeat
	5		5		Vol+
	6		6		Vol-
	7		7		Mute
	8		8		Tuning Up
	9		9		Tuning Down
	0		0		Menu
					Smart
					Media
					I<<
					>>I
					<<
					>>
					Stop
					Play
					Pause
					Options
					Text
					Vol +
					Vol -
					Mute
					Ch +
					Ch -
					Menu





Original	Replacement	Original	Replacement
 Return	 Back		
 Preset Up	 Up		
 Preset Down	 Down		
 Right/Seek Up	 Right		
 Left/Seek Down	 Left		
 Enter	 Ok		
 Audio	 Dual		
 Subtitle	 Subt		
 Info	 Info		
 Exit	 Exit		
 P.Sound	 Shift + Dual		
 EQ	 3D		
 Zoom/Mo/ST	 Shift + Eject		
 Angle/Autoscan	 Guide		

