



Original	Replacement
Standby	Power
DTV/VCR	Display / Media
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
FAV	Fav / Marker / PC
Audio	Audio / Lang I/II
Recall	Back / Return
Subtitle	Subtitle / EQ

Original	Replacement
Info	Info / Angle
Menu	Menu / Home
EPG	Guide / EPG / -/--
Exit	Exit / Cancel / Clear
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
Text	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat





	Original	Replacement	Original	Replacement
	Blue	Blue / Prime Video / Random		
	Tv/Radio	TV/Radio /		
	Rec List	Smart / List		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Play	Play / Slow		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Record	Rec / Rec Mode		

