



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	EPG		Guide
	Goto		Shift + Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Pg Up		Shift + Up
	PG Dn		Shift + Down
	CH+		Ch +
	CH-		Ch -
	>>		>>





	Original	Replacement	Original	Replacement
	<<	<<		
	>>	>>		
	l<<	l<<		
	Play	PLAY MODE Play		
	Pause	Pause		
	Stop	Stop		
	Rec	REC Rec		
	Lang	SOUND DUAL Dual		
	Timeshift	HOME SMART Smart		
	Tv/Radio	SEARCH TV/R TV/R		
	Repeat	SHIFT +  REPEAT TEXT Shift + Text		
	Red / Zoom	A Red		
	Green / Aspect	B Green		
	Yellow / V-Format	C Yellow		
	Blue / Timer	D Blue		

