




Original	Replacement
 Power	 Power
 Sleep-Auto Off	 Sleep
 Display-Clock/Tim	 Info
 Dimmer-Play/Re	 Rec
 Disc	 Menu
 Program	 Shift + Sleep
 Repeat	 Text
 Play Mode	 Shift + Play
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 ≥10	 Guide
 Del	 Exit
 Play/Pause CD	 Play
 Stop/Clear	 Stop
 Music P.	 Dual
 Tuner Band	 TV/R
 Tape >	 Pause
 Vol-	 Vol -
 Vol+	 Vol +
 >> FF/Cursor→	 >>
  <</Rew/Cursor←	  <<
 Album→	 >>
 Album←	 <<
 Intro	 AV
 Marker	 Eject
 Title Search	 Options





	Original	Replacement	Original	Replacement
	Enter		Ok	
	S.Woofer		3D	
	H.Bass		Subt	
	Preset EQ.		Format	
	Muting		Mute	

