



Original	Replacement
Sleep	Sleep / Timer
Standby AV	Shift + Power
System Standby	Power
Video1	Shift + 4
Video 2	Shift + 1
DVD	Shift + 2
MD/Tape	Shift + 5
CD	Shift + 3
Tuner	Shift + 6
Top Menu	Shift + D.Menu / Top Menu
1 Tuner	1
2 Tuner	2
3 Tuner	D.Menu / Top
4 Tuner	3
Up	Up
Left	Left
4 Tuner	4

Original	Replacement
Enter	OK
5 Tuner	5
6 Tuner	6
7 Tuner	7
8 Tuner	Down
9 Tuner	8
Recall	Fav / Marker / PC
9 Tuner	9
>10 Tuner/Shift/-/-	Guide / EPG / -/-
0 Tuner	0
Enter/D.Tuning/Return Tuner	Back / Return
I<</CH/Preset-	I<< / Preset-
I<</CH Preset-Tuner	Shift + I<< / Preset-
>>I/CH/Preset+	>>I / Preset+
>>I/CH Preset+ Tuner	Shift + >>I / Preset+
Tv/Video/ANT	AV / Input / RDS





Original	Replacement
<<	<< / Tune-
>>	>> / Tune+
D.Skip/TV/VTR	TV/Radio /
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
2CH	Sound / Title
A.F.D.	Eject / Surround
Movie/Music	Audio / Lang I/II
Test Tone	Subtitle / EQ
Main Menu	Menu / Home
Multi CH	Picture / Format
< Menu	Shift + Left
Menu >	Shift + Right
Muting	Mute / Dimmer
-	CH- / Page-
+	CH+ / Page+

Original	Replacement
Master Vol+	Vol+
Tv Vol+	Shift + Vol+
Tv CH+	Shift + CH+ /
Master Vol-	Vol-
Tv Vol-	Shift + Vol-
Tv CH-	Shift + CH- /





 

 

 





 

 

 

 

 
 



 


 

 





Original	Replacement
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Replacement
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Replacement
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 CD	 1
 1 Video 1	 Shift + 1
 2 CD	 2
 2 Video 1	 Shift + 2
 3 CD	 3
 3 Video 1	 Shift + 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

Original	Replacement
 5 Video 1	 Shift + 5
 6 CD	 6
 6 Video 1	 Shift + 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 8
 8 Video 1	 Shift + 8
 9 CD	 9
 9 Video 1	 Shift + 9
 >10/Shift/-/- CD	 Guide / EPG / -/-
 >10/Shift/-/- Video 1	 Shift + Guide / EPG / -/-
 0 CD	 0
 0 Video 1	 Shift + 0
 Enter/D.Tuning/Return CD	 Back / Return
 Enter/D.Tuning/Return Video 1	 Shift + Back / Return
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-





Original	Replacement	Original	Replacement
>>  CD	>>  / Preset+		
>>  Video 1	+  Shift + >>  / Preset+		
<<< CD	<<< / Tune-		
<<< Video 1	+  Shift + <<< /		
>>> CD	>>> / Tune+		
>>> Video 1	+  Shift + >>> /		
D.Skip/TV/VTR CD	TV/Radio /		
D.Skip/TV/VTR Video 1	+  Shift + TV/Radio / Program		
Play CD	Play / Slow		
Play Video 1	+  Shift + Play /		
Pause CD	Pause / Step / Freeze		
Pause Video 1	+  Shift + Pause / Step /		
Stop CD	Stop / Hold		
Stop Video 1	+  Shift + Stop /		
Muting	Mute / Dimmer		
Master Vol+	Vol+		
Master Vol-	Vol-		

Original	Replacement





Original	Replacement
Standby	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	Shift + 1
2 MD/Tape	2
2 Video 2	Shift + 2
3 MD/Tape	3
3 Video 2	Shift + 3
4 MD/Tape	4
4 Video 2	Shift + 4
5 MD/Tape	5

Original	Replacement
5 Video 2	Shift + 5
6 MD/Tape	6
6 Video 2	Shift + 6
7 MD/Tape	7
7 Video 2	Shift + 7
8 MD/Tape	8
8 Video 2	Shift + 8
9 MD/Tape	9
9 Video 2	Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	Shift + I<< / Preset-





Original	Replacement	Original	Replacement
>>  MD/Tape	>>  / Preset+		
>>  Video 2	+  Shift + >>  / Preset+		
<< MD/Tape	<< / Tune-		
<< Video 2	+  Shift + << /		
>> MD/Tape	>> / Tune+		
>> Video 2	+  Shift + >> /		
D.Skip/TV/VTR MD/Tape	AV / Input / RDS		
D.Skip/TV/VTR Video 2	+  Shift + AV / Input / RDS		
Play MD/Tape	Play / Slow		
Play Video 2	+  Shift + Play /		
Pause MD/Tape	Pause / Step / Freeze		
Pause Video 2	+  Shift + Pause / Step /		
Stop MD/Tape	Stop / Hold		
Stop Video 2	+  Shift + Stop /		
Muting	Mute / Dimmer		
Master Vol+	Vol+		
Master Vol-	Vol-		

Original	Replacement

