


 

 








 




Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Pause / Stop	 Pause	 Left / <<	 Left
 Pause / Stop	 Stop	 Left / <<	 <<
 <<	 <<	 Right / >>	 Right
 >>	 >>	 Right / >>	 >>
 CH +	 Ch +	 Play / Enter	 Ok
 CH -	 Ch -	 Play / Enter	 Play
 Vol +	 Vol +	 Down	 Down
 Vol -	 Vol -	 [....]	 Subt
 *	 Smart	 Open / Close	 Eject
 Input	 AV	 Zoom	 Shift + Eject
 TV / DVD Mode	 TV/R	 [+]	 Info
 Mute	 Mute	 1	 1
 Language	 Dual	 2	 2
 DVD Menu	 D. Menu	 3	 3
 DVD Menu	 Menu	 4	 4
 Tools	 Options	 5	 5





	Original	Replacement		Original	Replacement
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	--		Guide		

