









 








 
 

 









 





 

 

 
 
 
 
 
 


 
 
 

 
 
 

 




Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Volume +	 Vol +
Display/▼	 Ch -	 Volume -	 Vol -
Menu/▲	 Ch +	Tuning +	 >>
Return / Repeat	 Text	Tuning -	 <<
 Mute	 Mute	Up	 Up
 1	 1	Left	 Left
 2	 2	 Enter	 Ok
 3	 3	Right	 Right
 4	 4	Down	 Down
 5	 5	 Return / Repeat	 Back
 6	 6	 Info	 Info
 7	 7	 Phono	 Shift + 1
 8	 8	 Tape	 Shift + 2
 9	 9	 CD	 Shift + 3
 0	 0	 Line 1	 Shift + 4
 +10	 Guide	 Line 2	 Shift + 5
 Option	 Options	 Line 3	 Shift + 6

Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Volume +	 Vol +
Display/▼	 Ch -	 Volume -	 Vol -
Menu/▲	 Ch +	Tuning +	 >>
Return / Repeat	 Text	Tuning -	 <<
 Mute	 Mute	Up	 Up
 1	 1	Left	 Left
 2	 2	 Enter	 Ok
 3	 3	Right	 Right
 4	 4	Down	 Down
 5	 5	 Return / Repeat	 Back
 6	 6	 Info	 Info
 7	 7	 Phono	 Shift + 1
 8	 8	 Tape	 Shift + 2
 9	 9	 CD	 Shift + 3
 0	 0	 Line 1	 Shift + 4
 +10	 Guide	 Line 2	 Shift + 5
 Option	 Options	 Line 3	 Shift + 6













 

 
 








 
 

 
 
 








Original	Replacement
Dock	Shift + 7
Tuner	Shift + 8
Speakers A	Red
Speakers B	Green
Enter2	Pre Ch
Menu/▲	Menu
Display/▼	Shift + Info
Top Menu/Shuffle	D. Menu
Sleep	Sleep
FM	Smart
AM	Media
[A]	Shift + 9
Power Source Line 2/Line 3	Blue
Power Source	Yellow
Preset+	>>
Preset-	<<

Original	Replacement





Original	Replacement	Original	Replacement
Power Receiver		Power	
Sleep		Sleep	
Info		Info	
FM		Smart	
AM		Media	
Tuning+		Ch +	
Tuning-		Ch -	
Preset+		Blue	
Preset-		Yellow	
Vol+		Vol +	
Vol-		Vol -	
Option		Options	
Mute		Mute	
Menu/▲		Menu	
Display/▼		Shift + Info	
Return/Repeat		Back	
Up		Up	

Original	Replacement	Original	Replacement
Down		Down	
Right		Right	
Left		Left	
Enter		Ok	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
+10		Guide	
Enter2		Pre Ch	
Power Source		Text	





Original	Replacement	
Power Source Line2/Line3		AV
Phono		Shift + 1
Tape		Shift + 2
CD		Shift + 3
Line 1		Shift + 4
Line 2		Shift + 5
Line 3		Shift + 6
Dock		Shift + 7
Tuner		Shift + 8
[A]		Shift + 9
Power Source		Shift + Power
Play CD		Play
Stop CD		Stop
Pause CD		Pause
Disc Skip CD		Rec
<< CD		<<
>> CD		>>

Original	Replacement	
<< CD		<<
>> CD		>>

