








 









 


 

 



 



 
 





 
















































 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 <<	 << / Tune-
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 I<<	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Index	 Info / Angle
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Subtitle	 Subtitle / EQ

Original	Replacement
 Mix	 Picture / Format
 Reveal	 D.Menu / Top
 TTX	 Text / Goto
 Clock	 Sleep / Timer
 Audio Language	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 S	 Sound / Title
 R	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 M	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Flip	 Smart / List





Original	Replacement	Original	Replacement
 CH+	 CH+ / Page+		
 Vol-	 Vol-		
 EPG	 Guide / EPG / -/--		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 FAV	 Fav / Marker / PC		
 0	 0		
 Recall	 Back / Return		

Original	Replacement	Original	Replacement

