





Original		Replacement		Original		Replacement	
	Power		Power		Yellow/Repeat		Yellow
	I<<		I<<		Blue/A-B		Blue
	Open/Close		Eject		CH+		Ch +
	<<		<<		CH-		Ch -
	>>		>>		Tv-Menu		Menu
	>>		>>		TV/AV		AV
	Play/Pause		Play		Vol+		Vol +
	TV/TXT/Langua		Text		Vol-		Vol -
	Cancel/Zoom		Shift + Eject		DTV		Smart
	Reveal/Subtitle		Subt		DVD Setup		Shift + Menu
	Stop		Stop		Exit		Exit
	Hold/Menu		D. Menu		Display		Shift + Info
	Size/Angle		Format		Up		Up
	Subpage/Title		Options		Down		Down
	Index/Goto		Media		Right		Right
	Red/Program		Red		Left		Left
	Green/Slow		Green		OK		Ok





Original		Replacement	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  /	Shift + Guide
	Recall	 / 	Pre Ch
	Picture	 +  / 	Shift + Format
	Sound	 +  / 	Shift + Dual
	Nicam/A2	 / 	Dual
	Mute		Mute
	Sleep	 / 	Sleep

Original		Replacement	
	Info	 / 	Info
	Subtitle	 +  / 	Shift + Subt
	Channel List	 / 	List
	EPG		Guide
	Tv/Radio	 / 	TV/R
	FAV	 +  / 	Shift + Pre Ch
	Aspect	 / 	3D

