













 









 



 







 

 

 



 



 



 



 



 











Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Energy		Setup / OPT /		0		0
	Picture		Picture / Format		TTX		Text / Goto
	Sound		Sound / Title		Recall		Back / Return
	Mute		Mute / Dimmer		Menu		Menu / Home
	Audio		Audio / Lang I/II		Input		AV / Input / RDS
	Subtitle		Subtitle / EQ		Exit		Exit / Cancel / Clear
	16:9/4:3		Shift + Picture / Format		Info		Info / Angle
	Sleep		Sleep / Timer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		OK
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		Index/CH List		Smart / List
	8		8		Hold/EPG		Guide / EPG / -/-





	Original	Replacement	Original	Replacement
	Size/FAV List		Fav / Marker / PC	
	Subpage/Play List		Display / Media	
	CH+		CH+ / Page+	
	CH-		CH- / Page-	
	Play		Play / Slow	
	Stop		Stop / Hold	
	<<		<< / Tune-	
	>>		>> / Tune+	
	Tv Pause		Pause / Step / Freeze	
	→/Goto		TV/Radio /	
	I<<		I<< / Preset-	
	>>I		>>I / Preset+	
	Rec		Rec / Rec Mode	
	Red		Red / Netflix / Search	
	Green		Green / APP / Repeat	
	Yellow		Yellow / YouTube / Repeat	
	Blue		Blue / Prime Video / Random	

