


 



 

 



 




 
 
 


 


 
 










 


 

 




| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|---------|---|-------------|---|--------|
|  | STANDBY/ON |  | Power |  | PROGRAM |  | Sleep |
|  | REPEAT / FM |  | Text |  | S.BASS |  | Dual |
|  | REPEAT A-B |  | Eject |  | CLOCK |  | AV |
|  | SHUFFLE |  | D. Menu |  | DIMMER |  | Guide |
|  | VOL + |  | Vol + |  | SLEEP/TIMER |  | Format |
|  | VOL - |  | Vol - | | | | |
|  | PLAY/PAUSE |  | Play | | | | |
|  | STOP |  | Stop | | | | |
|  | ^ |  | Up | | | | |
|  | </I<</TUNING - |  | I<< | | | | |
|  | </I<</TUNING - |  | Left | | | | |
|  | ENTER |  | Ok | | | | |
|  | >/>>I/TUNING |  | >>I | | | | |
|  | >/>>I/TUNING |  | Right | | | | |
|  | V |  | Down | | | | |
|  | MENU |  | Menu | | | | |
|  | MUTE |  | Mute | | | | |

