





 



 

 
 


 

 

 

 



 





 
 
 

















 





















| Original   | Replacement  |
|--|--|
|  Power      |  Power              |
|  Up         |  Up                 |
|  Left       |  Left               |
|  Enter      |  OK                 |
|  Right      |  Right              |
|  Down       |  Down               |
|  Menu       |  Menu / Home        |
|  Return     |  Back / Return      |
|  Tv Vol+    |  Vol+               |
|  CH+        |  CH+ / Page+        |
|  Tv Vol-    |  Vol-               |
|  CH-       |  CH- / Page-       |
|  Mute Tv  |  Mute / Dimmer    |
|  Input Tv |  AV / Input / RDS |
|  1        |  1                |
|  2        |  2                |
|  3        |  3                |

| Original  | Replacement  |
|---|--|
|  4   |  4          |
|  5   |  5          |
|  6   |  6          |
|  7   |  7          |
|  8   |  8          |
|  9   |  9          |
|  0   |  0          |
|  ENT |  Shift + OK |











| Original  | Replacement    | Original  | Replacement           |
|---|----------------|---|-----------------------|
|      | Power          |      | Power                 |
|      | Mute           |      | Mute / Dimmer         |
|      | Play/Memory    |      | Play / Slow           |
|      | Pause/Preset   |      | Pause / Step / Freeze |
|      | Stop/Preset Up |      | Stop / Hold           |
|      | <</Tuning Up   |      | << / Tune-            |
|      | >>             |      | >> / Tune+            |
|      | I<</Tuning     |      | I<< / Preset-         |
|      | >>I            |      | >>I / Preset+         |
|      | Music          |      | Sound / Title         |
|      | Stereo         |      | Audio / Lang I/II     |
|    | Surround       |    | Eject / Surround      |
|    | Movie          |    | Picture / Format      |
|    | Sleep          |    | Sleep / Timer         |
|    | TV             |    | TV/Radio /            |
|    | Sur Decode     |    | D.Menu / Top          |
|    | Setup          |    | Setup / OPT /         |
|    | Up             |    | Up                    |
|    | Info           |    | Info / Angle          |
|    | Left           |    | Left                  |
|    | Enter          |    | OK                    |
|    | Right          |    | Right                 |
|    | Down           |    | Down                  |
|    | Return         |    | Back / Return         |
|    | Vol+           |    | Vol+                  |
|    | iPod           |    | Smart / List          |
|    | Vol-           |    | Vol-                  |
|    | Entertainment  |    | Display / Media       |
|  | 1              |  | 1                     |
|  | 2              |  | 2                     |
|  | 3              |  | 3                     |
|  | 4              |  | 4                     |
|  | 5              |  | 5                     |
|  | 6              |  | 6                     |





























 

 











 











 

 

 



| Original  | Replacement    | Original  | Replacement                 |
|---|----------------|---|-----------------------------|
|    | 7              |    | 7                           |
|    | 8              |    | 8                           |
|    | 9              |    | 9                           |
|    | HDMI 1         |    | Guide / EPG / -/--          |
|    | 0              |    | 0                           |
|    | HDMI 2         |    | Fav / Marker / PC           |
|    | Off            |    | Shift + Power               |
|   | Pause/Preset   |    | Shift + Pause / Step /      |
|   | Stop/Preset Up |    | Shift + Stop /              |
|   | <</Tuning Up   |    | Shift + << /                |
|   | I<</Tuning     |  | Shift + I<< / Preset-       |
|  | Univolume      |  | Shift + Audio / Lang I/II   |
|  | FM             |  | Shift + TV/Radio / Program  |
|  | Intellibeam    |  | Shift + D.Menu / Top Menu   |
|  | Option         |  | Shift + Setup / OPT / Tools |
|  | ENT            |  | Shift + OK                  |
|  | AUX1           |  | Shift + 1                   |

| Original  | Replacement | Original  | Replacement |
|---|-------------|---|-------------|
|  | AUX2        |  | Shift + 2   |
|  | HDMI 3      |  | Shift + 3   |
|  | HDMI 4      |  | Shift + 4   |





| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|    | Power       |    | Power                 |
|    | Up          |    | Up                    |
|    | Left        |    | Left                  |
|    | Enter       |    | OK                    |
|    | Right       |    | Right                 |
|    | Down        |    | Down                  |
|    | Top Menu    |    | D.Menu / Top          |
|    | Menu        |    | Menu / Home           |
|    | Return      |    | Back / Return         |
|    | 1           |    | 1                     |
|    | 2           |    | 2                     |
|    | 3           |    | 3                     |
|  | 4           |  | 4                     |
|  | 5           |  | 5                     |
|  | 6           |  | 6                     |
|  | 7           |  | 7                     |
|  | 8           |  | 8                     |
|  | 9           |  | 9                     |
|  | 0           |  | 0                     |
|  | +10         |  | Guide / EPG / -/--    |
|  | ENT         |  | Fav / Marker / PC     |
|  | <<          |  | >> / Tune+            |
|  | Stop        |  | Stop / Hold           |
|  | >>          |  | I<< / Preset-         |
|  | I<<         |  | << / Tune-            |
|  | Pause       |  | Pause / Step / Freeze |
|  | >>I         |  | >>I / Preset+         |
|  | Play        |  | Play / Slow           |

