




 







 



 


 


 

 

 
 
 

 

 

 
 


 

 

 






 
 



 



 







 




| Original | Replacement | Original | Replacement |
|---|---|--|--|
|  Power |  Power |  >> /Preset- |  >> |
|  1 |  1 |  Vol+ |  Vol + |
|  2 |  2 |  Vol- |  Vol - |
|  3 |  3 |  Sound Field+ |  Ch + |
|  4 |  4 |  Sound Field- |  Ch - |
|  5 |  5 |  Mute |  Mute |
|  6 |  6 |  Sleep |  Sleep |
|  7 |  7 |  AMP Menu |  Menu |
|  8 |  8 |  Return |  Back |
|  9 |  9 |  Options |  Options |
|  0/10 |  0 |  Display |  Info |
|  Play/D.Tuning |  Play |  Home |  Smart |
|  Pause |  Pause |  Up |  Up |
|  <</Tuning- |  << |  OK |  Ok |
|  >>/Tuning+ |  >> |  Down |  Down |
|  <</Preset- |  << |  Right |  Right |
|  Stop/Mem |  Stop |  Left |  Left |





| Original | Replacement |
|---------------------------|---------------|
| Folder+ | Shift + Ch + |
| Folder- | Shift + Ch - |
| Preview(HDMI)/iPhone CTRL | Media |
| Repeat/Top | Text |
| Shuffle/Pop Up | AV |
| BD | Red |
| DVD | Green |
| TV | TV/R |
| Game | Yellow |
| Pure Direct | Pre Ch |
| Power Tv | Shift + Power |
| Input Tv | Shift + AV |
| 1 TV | Shift + 1 |
| 2 TV | Shift + 2 |
| 3 TV | Shift + 3 |
| 4 TV | Shift + 4 |
| 5 TV | Shift + 5 |

| Original | Replacement |
|------------------|-----------------|
| 6 TV | Shift + 6 |
| 7 TV | Shift + 7 |
| 8 TV | Shift + 8 |
| 9 TV | Shift + 9 |
| 0/10 TV | Shift + 0 |
| Display TV | Shift + Info |
| Up TV | Shift + Up |
| OK TV | Shift + Ok |
| Down TV | Shift + Down |
| Right TV | Shift + Right |
| Left TV | Shift + Left |
| Return TV | Shift + Back |
| SA-CD/CD | Shift + Green |
| Options TV | Shift + Options |
| USB | Shift + Blue |
| Home TV | Shift + Smart |
| Play/D.Tuning TV | Shift + Play |







 
 






 
 





 



 

 

 
 
 

 

 

 

 


 


 














 










| Original | Replacement | Original | Replacement |
|----------------|-------------------|----------|-------------|
| Tuner | + Shift + Yellow | | |
| SAT/CATV | Blue | | |
| Pause TV | + Shift + Text | | |
| <</Tuning- TV | + Shift + << | | |
| >>/Tuning+ TV | + Shift + >> | | |
| Stop/Mem TV | + Shift + Stop | | |
| <</Preset- TV | + Shift + << | | |
| >> /Preset+ TV | + Shift + >> | | |
| Video | + Shift + Red | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement | Original | Replacement |
|---|--|---|---|
|  Power |  Power |  0/10 DVD |  0 |
|  DVD |  Green |  Display DVD |  Info |
|  BD |  Red |  Up DVD |  Up |
|  SA-CD/CD |  Yellow |  Down DVD |  Down |
|  Video |  Blue |  Right DVD |  Right |
|  TV |  TV/R |  Left DVD |  Left |
|  Repeat/Top Menu |  Text |  OK DVD |  Ok |
|  Shuffle/Pop Up |  AV |  Return DVD |  Back |
|  1 DVD |  1 |  Options DVD |  Options |
|  2 DVD |  2 |  Home DVD |  Smart |
|  3 DVD |  3 |  Play/D.Tuning |  Play |
|  4 DVD |  4 |  <</Tuning- |  << |
|  5 DVD |  5 |  >>/Tuning+ |  >> |
|  6 DVD |  6 |  I<</Preset- |  I<< |
|  7 DVD |  7 |  Pause DVD |  Pause |
|  8 DVD |  8 |  Stop/Mem DVD |  Stop |
|  9 DVD |  9 |  >>I/Preset+ |  >>I |



DVD







 


 




 




 








 




 


| Original | Replacement |
|------------------------|-----------------|
| Repeat/Top Menu | Shift + Text |
| Shuffle/Pop Up Menu BD | Shift + AV |
| 1 BD | Shift + 1 |
| 2 BD | Shift + 2 |
| 3 BD | Shift + 3 |
| 4 BD | Shift + 4 |
| 5 BD | Shift + 5 |
| 6 BD | Shift + 6 |
| 7 BD | Shift + 7 |
| 8 BD | Shift + 8 |
| 9 BD | Shift + 9 |
| 0/10 BD | Shift + 0 |
| Display BD | Shift + Info |
| Return BD | Shift + Back |
| Options BD | Shift + Options |
| Up BD | Shift + Up |
| OK BD | Shift + Ok |

| Original | Replacement |
|------------------|----------------|
| Down BD | Shift + Down |
| Right BD | Shift + Right |
| Left BD | Shift + Left |
| Home BD | Shift + Smart |
| Play/D.Tuning BD | Format |
| Pause BD | 3D |
| Stop/Mem BD | Subt |
| <</Tuning- BD | Shift + Format |
| >>/Tuning+ BD | Shift + 3D |
| I<</Preset- BD | Ch - |
| >>/Tuning+ BD | Ch + |
| Vol+ | Vol + |
| Vol- | Vol - |
| Mute | Mute |





| | Original | Replacement | Original | Replacement |
|---|----------------|---|--|---------------|
|  | Power |  |  | 8 |
|  | Vol+ |  |  | 9 |
|  | Vol- |  |  | 0/10 |
|  | Mute |  |  | Display |
|  | SA-CD/CD |  |  | Play/D.Tuning |
|  | BD |  |  | <</Tuning- |
|  | Video |  |  | >>/Tuning+ |
|  | DVD |  |  | Pause |
|  | Repeat/Top |  |  | Stop/Mem |
|  | Shuffle/Pop Up |  |  | I<</Preset- |
|  | 1 |  |  | >>I/Preset+ |
|  | 2 |  | | |
|  | 3 |  | | |
|  | 4 |  | | |
|  | 5 |  | | |
|  | 6 |  | | |
|  | 7 |  | | |





| Original | Replacement |
|---|--|
|  Power |  Power |
|  BD |  Green |
|  DVD |  Blue |
|  Video |  Yellow |
|  SA-CD/CD |  Red |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/10 |  0 |
|  Display |  Info |
|  Up |  Up |

| Original | Replacement |
|---|---|
|  OK |  Ok |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Home |  Smart |
|  Play/D.Tuning |  Play |
|  <</Tuning- |  << |
|  >>/Tuning+ |  >> |
|  I<</Preset- |  I<< |
|  Pause |  Pause |
|  Stop/Mem |  Stop |
|  >>I/Preset+ |  >>I |
|  Mute |  Mute |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |

