




 
















Original	Replacement
 Power	 Power
 Clock	 D. Menu
 Timer	 AV
 Open/Close	 Eject
 Menu	 Menu
 Enter iPod	 Ok
 Play iPod	 Shift + Play
 >>I iPod	 Shift + >>I
 Pause iPod	 Shift + Pause
 ↑ iPod	 Up
 ↓ iPod	 Down
 I<< iPod	 Shift + I<<
 Repeat iPod	 Shift + Text
 Shuffle iPod	 Shift + Subt
 iPod	 Green
 CD	 Yellow
 USB	 Blue

Original	Replacement
 AUX	 Red
 Tuner	 Smart
 Tuning Up	 Shift + Ch +
 Tuning Down	 Shift + Ch -
 Preset Up	 Ch +
 Preset Down	 Ch -
 Memory	 TV/R
 Mono	 Dual
 Dimmer	 3D
 Sleep	 Sleep
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Option	 Options
 Up	 Shift + Up
 Down	 Shift + Down





Original	Replacement
 Right	 Shift + Right
 Left	 Shift + Left
 Enter	 Shift + Ok
 Folder Up	 Right
 Folder Down	 Left
 Repeat	 Text
 Shuffle	 Subt
 Pause	 Pause
 I<<	 I<<
 Stop	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 >>I	 >>I
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter 3	 Pre Ch

