








 






Original	Replacement	Original	Replacement
Standby / On	Power	Next / Fwd	>> / Tune+
Title	Sound / Title	Next / Fwd	>>  / Preset+
Menu	Menu / Home	0	0
Open / Close	Eject / Surround	Clear	Exit / Cancel / Clear
OSD / Setup	Setup / OPT /	Search	Red / Netflix / Search
1	1	Pause / Step	Pause / Step / Freeze
2	2	Up	Up
3	3	Play	Play / Slow
Slow Fwd	Shift + Play /	Left	Left
4	4	Enter	OK
5	5	Right	Right
6	6	Stop	Stop / Hold
Prev / Rev	<< / Tune-	Down	Down
Prev / Rev	<< / Preset-	Return	Back / Return
7	7	Play Mode	Display / Media
8	8	A-B	Yellow / YouTube / Repeat
9	9	Memory	Fav / Marker / PC





Original		Replacement	
	Timer		Sleep / Timer
	Equalizer		Shift + Subtitle / EQ
	Vol / CH		Smart / List
	empty left		CH- / Page-
	empty right		CH+ / Page+
	Zoom		Zoom / Size
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II

Original		Replacement	

