





 

 





























 
 
 









Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio I/II	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Auto	 Smart / List
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





















 













Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Stop /
	 Shift + Green / APP /
	 Subtitle / EQ
	 Info / Angle
	 Zoom / Size
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 D.Menu / Top

Original	Replacement
	 Guide / EPG / -/--
	 TV/Radio /





Original	Replacement	Original	Replacement
 Standby	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 Exit	 Exit / Cancel / Clear
 P.Mode	 Picture / Format	 Display	 Display / Media
 S.Mode	 Sound / Title	 Up	 Up
 Audio I/II	 Audio / Lang I/II	 Left	 Left
 Sleep	 Sleep / Timer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol-	 Vol-
 4	 4	 Vol+	 Vol+
 5	 5	 CH-	 CH- / Page-
 6	 6	 CH+	 CH+ / Page+
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random





	Original	Replacement	Original	Replacement
	Text	Text / Goto		
	Subtitle	Subtitle / EQ		
	Index	Info / Angle		
	Size	Zoom / Size		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Play/Pause	Play / Slow		
	Play/Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	I<<	I<< / Preset-		
	>>I	>>I / Preset+		
	Rec	Rec / Rec Mode		
	Timeshift	Smart / List		
	EPG	Guide / EPG / -/--		
	Tv/Radio	TV/Radio /		

