




 

 



 











 

 

 

 



 

 


 


 
 

 








 

 
 
 
 
 
 
 

 








Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Menu		Menu
	Picture		Format
	Sound		Dual
	PRG +		Ch +
	PRG -		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	CTRL		Media
	Mute		Mute
	Exit		Exit
	Size / Audio		Shift + Dual
	Still / Subt		Subt
	PIP / REP		Options
	Focus / A-B		Eject
	Normal / Title		Ok





Original	Replacement	Original	Replacement
 CVBS1	 +  Shift + 1		
 CVBS2	 +  Shift + 2		
 CVBS3	 +  Shift + 3		
 Y Pb Pr	 +  Shift + 4		
 YC1	 +  Shift + 5		
 YC2	 +  Shift + 6		
 PC	 PRE-CH Pre Ch		
 HDMI	 Smart		
 MTS	 List		
 [≡ ] / Sleep	 Sleep		
 [≡ i ] / Time	 3D		
 [≡ ] / PREPG	 Guide		
 Red / Delete	 Red		
 Green / Skip	 Green		
 Yellow / Insert	 Yellow		
 Blue / Replace	 Blue		

Original	Replacement

