



Original	Replacement
Timer	+ Shift + Sleep / Timer
Sleep	Sleep / Timer
Mono Tuner	Display / Media
Clock	Setup / OPT /
CD Edit/Check	Smart / List
PRGM	TV/Radio /
Random/Repeat	+ Shift + Green / APP /
Random/Repeat	+ Shift + Blue / Prime /
1	1
2	2
3	3
Tape/Deck1/2	Red / Netflix / Search
4	4
5	5
6	6
Tuner/Band	Green / APP / Repeat
7	7

Original	Replacement
8	8
9	9
Video/AUX	Yellow / YouTube / Repeat
0	0
+10	Guide / EPG / -/-
CD	Blue / Prime Video / Random
Disc Direct Play 1	+ Shift + 1
Disc Direct Play 2	+ Shift + 2
Disc Direct Play 3	+ Shift + 3
Disc Direct Play 4	+ Shift + 4
Disc Direct Play 5	+ Shift + 5
Disc Direct Play 6	+ Shift + 6
Disc Direct Play 7	+ Shift + 7
Manual Select	OK
Dolby Pro Logic	Sound / Title
T-Bass	Audio / Lang I/II
GEO	Subtitle / EQ





Original		Replacement		Original		Replacement	
	Open/Close		Eject / Surround		Stop / Down / Clear / Preset-		Stop / Hold
	Play / Up /		Play / Slow		Stop / Down / Clear / Preset-		Shift + I<< / Preset-
	Play / Up /		Shift + >>I / Preset+		Stop / Down / Clear / Preset-		Exit / Cancel / Clear
	Play / Up /		Up				
	>> / >>I / Right / Tuning Up		Right				
	>> / >>I / Right / Tuning Up		>> / Tune+				
	>> / >>I / Right / Tuning Up		>>I / Preset+				
	>> / >>I / Right / Tuning Up		Shift + >> /				
	Vol+		Vol+				
	Pause / Set		Pause / Step / Freeze				
	<< / I<< / Left / Tuning Down		Left				
	<< / I<< / Left / Tuning Down		<< / Tune-				
	<< / I<< / Left / Tuning Down		I<< / Preset-				
	<< / I<< / Left / Tuning Down		Shift + << /				
	Vol-		Vol-				
	Power		Power				
	Stop / Down / Clear / Preset-		Down				

