



 
 
 


 





 









 

 










 




 









Original	Replacement
 Power	 Power
 Freeze	 Stop
 Swap	 Back
 PIP	 Smart
 FAV.CH	 Pre Ch
 I-II	 Dual
 [≡]	 Text
 Mute	 Mute
 Sleep	 Sleep
 P.Size	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0	 0
 Jump	 Guide
 ENT	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 Info	 Info
 Source	 AV
 CH+	 Ch +
 Ch-	 Ch -
 Exit	 Exit
 Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right








 

 

 

 

 

 

 

 


 
 


 





 
 

 
 
 

 

 
 
 
 


 

 
 
 
 


 
 


 



 






Original	Replacement
 Down	 Down
 S.Mode	 Shift + Dual
 P.Mode	 Format
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡i]	 Options
 [≡?]	 TV/R
 [≡⇕]	 3D
 [≡□]	 Pause

Original	Replacement





Original	Replacement	Original	Replacement
 Power	 Power	 Hold / Auto	 Guide
 Mute	 Mute	 Hold / Auto	 Shift + Stop
 1	 1	 Red	 Red
 2	 2	 Green	 Green
 3	 3	 Yellow	 Yellow
 4	 4	 Blue	 Blue
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 I - II	 Dual
 8	 8	 Source	 AV
 9	 9	 Freeze	 Shift + Pause
 0	 0	 CH +	 Ch +
 Text	 Text	 CH -	 Ch -
 Recall / S.Page	 Back	 Sleep	 Sleep
 Index / PVR List	 Smart	 Menu	 Menu
 Reveal / Rec	 Rec	 DTV / Radio	 TV/R
 Zoom / T.Shift	 Eject	 Exit	 Exit





Original	Replacement
	 Format
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Shift + Format
	 Shift + Dual
	 Media
	 Info
	 Subt
	 Play
	 Pause
	 I<<
	 >>I
	 Stop
	 <<

Original	Replacement
	 >>
	 Pre Ch
	 Shift + Up
	 Shift + Text
	 Shift + Down
	 Shift + Back

