








 







Original	Replacement
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Shift + Guide / EPG / -/-
Recall	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Original	Replacement
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Up	Up
Left	Left
OK/Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow




**Original**
**Replacement**

 SIZE Play/Pause / Size	 STEP-FREEZE Pause / Step / Freeze
 HOLD Stop/Hold	 HOLD Stop / Hold
 TEXT Text	 GOTO TEXT Text / Goto
 SUBTITLE Subtitle	 EQ SUBTITLE Subtitle / EQ
 INDEX <</Index	 TUNE- << / Tune-
 REVEAL >>/Reveal	 TUNE+ >> / Tune+
 SUBPAGE I<</Subpage	 PRESET- I<< / Preset-
 FAV >>I/FAV	 PRESET+ >>I / Preset+
 FAV >>I/FAV	 PC FAV MARKER Fav / Marker / PC
 MEDIA Media	 SHIFT + MEDIA DISPLAY Shift + Display / Media
 REC Rec	 REC MODE Rec / Rec Mode
 EPG EPG	 GUIDE EPG Guide / EPG / -/--
 TVRADIO Tv/Radio	 PROGRAM TV/ RADIO TV/Radio /
 Red Red	 NETFLIX SEARCH Red / Netflix / Search
 Green Green	 APP REPEAT Green / APP / Repeat
 Yellow Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat
 Blue Blue	 Prime Video RANDOM Blue / Prime Video / Random

**Original**
**Replacement**