 





 



 

 







 



 

















 

 

 



 

 

 

 

 



 

 

 






Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Vol+		Vol+
	4		4		Vol-		Vol-
	5		5		Left		Left
	6		6		OK		OK
	7		7		Tv/Rad		TV/Radio /
	8		8		Page Up		CH+ / Page+
	9		9		Page Down		CH- / Page-
	0		0		HDMI/RES		Shift + 0
	FAV		Fav / Marker / PC		HDMI/RES		AV / Input / RDS
	Info		Info / Angle		Ratio		Picture / Format
	Menu		Menu / Home		Red		Red / Netflix / Search
	Back		Back / Return		SOS		D.Menu / Top
	EPG		Guide / EPG / -/--		SUB		Subtitle / EQ





Original	Replacement	Original	Replacement
 LANG	Green  APP REPEAT		Green / APP / Repeat
 LANG	Lang.  LANG I/II AUDIO		Audio / Lang I/II
 LANG	Yellow  YouTube REPEAT A-B		Yellow / YouTube / Repeat
 TXT	Blue  Prime Video RANDOM		Blue / Prime Video / Random
 TXT	TXT  GOTO TEXT		Text / Goto
 TIMER	Timer  TIMER SLEEP		Sleep / Timer
 MEDIA	Media  MEDIA DISPLAY		Display / Media
 REC	Rec  REC MODE		Rec / Rec Mode
 LIST USB	USB/List  LIST SMART		Smart / List
 PLAY	Play  SLOW		Play / Slow
 PAUSE	Pause  STEP-FREEZE		Pause / Step / Freeze
 STOP	Stop  HOLD		Stop / Hold
 TUNE+	>>  TUNE+		>> / Tune+
 TUNE-	<<  TUNE-		<< / Tune-
 PRESET+	>>   PRESET+		>>  / Preset+
 PRESET-	<<  PRESET-		<< / Preset-
 OPT-TOOLS SETUP	Nothing  SETUP		Setup / OPT /

