



Original	Replacement	Original	Replacement
<<	<< / Tune-	8	8
>>	>> / Tune+	9	9
I<<	I<< / Preset-	[=?]/Source	Eject / Surround
>>I	>>I / Preset+	0	0
Play	Play / Slow	O)/I/II/Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze	Menu	Menu / Home
Stop	Stop / Hold	Exit	Exit / Cancel / Clear
Power	Power	Up	Up
[=i]/Info	Info / Angle	Left	Left
Mute	Mute / Dimmer	Enter	OK
1	1	Right	Right
2	2	Down	Down
3	3	CH+ / Page+	CH+ / Page+
4	4	Index	Display / Media
5	5	Vol+	Vol+
6	6	CH- / Page-	CH- / Page-
7	7	List	Smart / List





Original		Replacement		Original		Replacement	
	Vol-		Vol-				
	♥		Fav / Marker / PC				
	Sleep		Sleep / Timer				
	EPG		Guide / EPG / -/--				
	Recall		Back / Return				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	[≡]		Text / Goto				
	[≡+]/Still		Zoom / Size				
	Radio		TV/Radio /				
	[≡♦]/[++]		Picture / Format				
	[≡x]		Setup / OPT /				
	[≡o]/Subtitle		Subtitle / EQ				
	DMP		D.Menu / Top				
	Rec		Rec / Rec Mode				

