







 








































 



 


 



 



 





Original	Replacement
 Open / Close	 Eject / Surround
 Power	 Power
 V.Mode	 Picture / Format
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Menu	 Menu / Home
 Repeat	 Green / APP / Repeat
 A-B RPT	 Yellow / YouTube / Repeat
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 OSD	 Display / Media
 N/P	 Red / Netflix / Search
 0	 0
 Setup	 Setup / OPT /
 Up	 Up
 Intro	 OK
 Left	 Left
 Play	 Play / Slow
 Right	 Right
 Zoom	 Zoom / Size
 Down	 Down
 Prog	 TV/Radio /
 CH+	 CH+ / Page+
 Rec	 Rec / Rec Mode
 CH-	 CH- / Page-





Original	Replacement
	TIMER Sleep / Timer
	Prime Video Blue / Prime Video / Random
	TOP MENU D.MENU D.Menu / Top
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	PRESET- I<< / Preset-
	PRESET+ >>I / Preset+
	STEP-FREEZE Pause / Step / Freeze
	HOLD Stop / Hold
	SHIFT + [Left Arrow] Shift + Left
	SHIFT + [Right Arrow] Shift + Right
	SHIFT + DVD 2 Shift + 2
	DIMMER MUTE Mute / Dimmer
	VOL - Vol-
	VOL + Vol+
	RDS AV INPUT AV / Input / RDS
	PC FAV MARKER Fav / Marker / PC

Original	Replacement
	GOTO TEXT Text / Goto
	LIST SMART Smart / List

