 












 
 
 
 
 

 



 
 
 

 

 


 




Original	Replacement	Original	Replacement
 Power On	 Power	 I<<	 I<<
 Power/Standby	 Shift + Power	 Play	 Play
 Sleep	 Sleep	 >>I	 >>I
 Display/DVD	 Media	 <<	 <<
 OSD Menu	 Menu	 Stop	 Stop
 CH+	 Ch +	 >>	 >>
 CH-	 Ch -	 Rec	 Rec
 Vol+	 Vol +	 Pause	 Pause
 Vol-	 Vol -	 Eject	 Eject
 Up	 Up	 Input Sel. DVD	 Options
 Left	 Left	 Input Sel. Multi	 Dual
 Enter	 Ok	 Input Sel. CD	 Text
 Right	 Right	 Input Sel. Tun	 AV
 Down	 Down	 Input Sel. Tap	 Format
 Exit/Return	 Exit	 Input Sel. PH	 3D
 Test/Tv/VCR	 TV/R	 Input Sel. PIP V1	 Red
 Muting	 Mute	 Input Sel. PIP V2	 Green

 

 
 




 
 
 

 







 

 
 






 

 
 




 

 
 











Original		Replacement		Original		Replacement	
	Input Sel. PIP V3		Yellow				
	Input Sel. PIP V4		Blue				
	1/Stereo		1				
	2/Direct		2				
	3/DSP>		3				
	4/Surround		4				
	5/THX		5				
	6/DSP<		6				
	7/SP A		7				
	8/CH Sel		8				
	9/Level+		9				
	0/Dimmer		0				
	+10/SP B		Guide				
	ENT/Level-		Pre Ch				







 



 


 





 


 


 


 
 

 


 











Original		Replacement		Original		Replacement	
	Power		Power		1		1
	Enter		Ok		2		2
	Display DVD		Media		3		3
	Up		Up		4		4
	OSD Menu		Menu		5		5
	Down		Down		6		6
	Exit/Return		Exit		7		7
	Right		Right		8		8
	I<<		I<<		9		9
	Left		Left		0		0
	Play		Play		+10		Guide
	>>I		>>I		Ent		Pre Ch
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Eject		Eject				


 
 



 
 


 
 












 





Original		Replacement		Original		Replacement	
	Track		Smart		8		8
	Disc		Media		9		9
	I<<		I<<		0		0
	Play		Play		+10		Guide
	>>I		>>I				
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Eject		Eject				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				





Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 I<<	 I<<	 9	 9
 Play	 Play	 +10	 Guide
 >>I	 >>I	 Ent	 Pre Ch
 Stop	 Stop		
 >>	 >>		
 Rec	 Rec		
 Pause	 Pause		
 Eject	 Eject		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		

