

 





 

 

 

 
 


 
 


 










 
 

 
 
 

 

 

 





 
 


 




 



 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 P.Mode	 Shift + Format
 Mute	 Mute	 Recall	 Back
 1	 1	 Menu	 Menu
 2	 2	 Display	 Info
 3	 3	 Media	 Media
 4	 4	 Exit	 Exit
 5	 5	 Rec	 Rec
 6	 6	 CH -	 Ch -
 7	 7	 Vol +	 Vol +
 8	 8	 Vol -	 Vol -
 9	 9	 Guide	 Guide
 0	 0	 CH +	 Ch +
 -/--	 Shift + Guide	 Fav +	 Pre Ch
 Nicam	 Options	 Up	 Up
 Source	 AV	 TV / Radio	 TV/R
 S.Mode	 Shift + Dual	 Fav -	 Shift + Pre Ch
 Sleep	 Sleep	 Down	 Down





Original		Replacement		Original		Replacement	
	Right		Right		Cyan		Blue
	Left		Left				
	Enter		Ok				
	Play/Pause / Hold		Play				
	Play/Pause / Hold		Pause				
	Aspect		Format				
	<< / Size		<<				
	>> / Reveal		>>				
	Stop / Index		Stop				
	Lang		Dual				
	I<< / Subpage		I<<				
	>>I / Auto		>>I				
	Subtitle		Subt				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				

