



Original	Replacement
Sleep	Sleep / Timer
Standby AV	Shift + Power
System Standby	Power
Video1	Shift + 4
Video 2	Shift + 1
DVD	Shift + 2
MD/Tape	Shift + 5
CD	Shift + 3
Tuner	Shift + 6
Top Menu	Shift + D.Menu / Top Menu
1 Tuner	1
2 Tuner	2
3 Tuner	D.Menu / Top
4 Tuner	3
Up	Up
Left	Left
4 Tuner	4

Original	Replacement
Enter	OK
5 Tuner	5
6 Tuner	Right
6 Tuner	6
7 Tuner	7
8 Tuner	Down
8 Tuner	8
Recall	Fav / Marker / PC
9 Tuner	9
>10 Tuner/Shift/-/-	Guide / EPG / -/-
0 Tuner	0
Enter/D.Tuning/Return Tuner	Back / Return
I<</CH/Presets	I<< / Preset-
I<</CH Preset-Tuner	Shift + I<< / Preset-
>>I/CH/Presets+	>>I / Presets+
>>I/CH Presets+ Tuner	Shift + >>I / Presets+
Tv/Video/ANT	AV / Input / RDS





Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 2CH	 Sound / Title
 A.F.D.	 Eject / Surround
 Movie/Music	 Audio / Lang I/II
 Test Tone	 Subtitle / EQ
 Main Menu	 Menu / Home
 Multi CH	 Picture / Format
 < Menu	 Shift + Left
 Menu >	 Shift + Right
 Muting	 Mute / Dimmer
 -	 CH- / Page-
 +	 CH+ / Page+

Original	Replacement
 Master Vol+	 Vol+
 Tv Vol+	 Shift + Vol+
 Tv CH+	 Shift + CH+ /
 Master Vol-	 Vol-
 Tv Vol-	 Shift + Vol-
 Tv CH-	 Shift + CH- /





 

 

 
 




 

 

 

 

 







 

 





Original	Replacement
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Replacement
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Replacement
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 CD	 1
 1 Video 1	 Shift + 1
 2 CD	 2
 2 Video 1	 Shift + 2
 3 CD	 3
 3 Video 1	 Shift + 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

Original	Replacement
 5 Video 1	 Shift + 5
 6 CD	 6
 6 Video 1	 Shift + 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 8
 8 Video 1	 Shift + 8
 9 CD	 9
 9 Video 1	 Shift + 9
 >10/Shift/-/ CD	 Guide / EPG / -/ -
 >10/Shift/-/ Video 1	 Shift + Guide / EPG / -/ -
 0 CD	 0
 0 Video 1	 Shift + 0
 Enter/D.Tuning/Return CD	 Back / Return
 Enter/D.Tuning/Return Video 1	 Shift + Back / Return
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-



 

 

 
 




 

 

 

 

 







 

 







Original	Replacement	Original	Replacement
 >>I CD	 >>I / Preset+		
 >>I Video 1	 +  Shift + >>I / Preset+		
 << CD	 << / Tune-		
 << Video 1	 +  Shift + << /		
 >> CD	 >> / Tune+		
 >> Video 1	 +  Shift + >> /		
 D.Skip/TV/VTR CD	 TV/Radio /		
 D.Skip/TV/VTR Video 1	 +  Shift + TV/Radio / Program		
 Play CD	 Play / Slow		
 Play Video 1	 +  Shift + Play /		
 Pause CD	 Pause / Step / Freeze		
 Pause Video 1	 +  Shift + Pause / Step /		
 Stop CD	 Stop / Hold		
 Stop Video 1	 +  Shift + Stop /		
 Muting	 Mute / Dimmer		
 Master Vol+	 Vol+		
 Master Vol-	 Vol-		





Original	Replacement
 Standby	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 MD/Tape	 1
 1 Video 2	 Shift + 1
 2 MD/Tape	 2
 2 Video 2	 Shift + 2
 3 MD/Tape	 3
 3 Video 2	 Shift + 3
 4 MD/Tape	 4
 4 Video 2	 Shift + 4
 5 MD/Tape	 5

Original	Replacement
 5 Video 2	 Shift + 5
 6 MD/Tape	 6
 6 Video 2	 Shift + 6
 7 MD/Tape	 7
 7 Video 2	 Shift + 7
 8 MD/Tape	 8
 8 Video 2	 Shift + 8
 9 MD/Tape	 9
 9 Video 2	 Shift + 9
 >10/Shift/-/- MD/Tape	 Guide / EPG / -/-
 >10/Shift/-/- Video 2	 Shift + Guide / EPG / -/-
 0 MD/Tape	 0
 0 Video 2	 Shift + 0
 Enter/D.Tuning/Return MD/Tape	 Back / Return
 Enter/D.Tuning/Return Video 2	 Shift + Back / Return
 I<< MD/Tape	 I<< / Preset-
 I<< Video 2	 Shift + I<< / Preset-





Original	Replacement
 >> MD/Tape	 >> / Preset+
 >> Video 2	 +  Shift + >> / Preset+
 << MD/Tape	 << / Tune-
 << Video 2	 +  Shift + << /
 >> MD/Tape	 >> / Tune+
 >> Video 2	 +  Shift + >> /
 D.Skip/TV/VTR MD/Tape	 AV / Input / RDS
 D.Skip/TV/VTR Video 2	 +  Shift + AV / Input / RDS
 Play MD/Tape	 Play / Slow
 Play Video 2	 +  Shift + Play /
 Pause MD/Tape	 Pause / Step / Freeze
 Pause Video 2	 +  Shift + Pause / Step /
 Stop MD/Tape	 Stop / Hold
 Stop Video 2	 +  Shift + Stop /
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-

Original	Replacement

