


 




Original	Replacement	Original	Replacement
	 Power		 Green / APP / Repeat
	 Sleep / Timer		 Audio / Lang I/II
	 Rec / Rec Mode		 Shift + 3
	 Shift + Sleep / Timer		 Shift + 5
	 1		 AV / Input / RDS
	 2		 Shift + 6
	 3		 Stop / Hold
	 4		 Picture / Format
	 5		 Play / Slow
	 6		 Mute / Dimmer
	 Guide / EPG / -/--		 << / Tune-
	 7		 >> / Tune+
	 8		 Vol-
	 9		 Vol+
	 0		
	 Exit / Cancel / Clear		
	 Shift + Play / Slow		

