




 

 


 














 






Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Replacement
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-





Original		Replacement	
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK		Shift + 2
	SAT2 + OK		Shift + 3
	TV + OK		Shift + 1
	PIP		Picture / Format

Original	Replacement





Original	Replacement
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Shift + YouTube / Repeat A-B
	<< / Tune-
	Red / Netflix / Search
	Green / APP / Repeat

Original	Replacement
	Stop / Hold
	Play / Slow
	Yellow / YouTube / Repeat
	>> / Tune+
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	D.Menu / Top
	Exit / Cancel / Clear
	Back / Return
	Info / Angle
	CH+ / Page+
	TV/Radio /
	Vol+









 

 



















 

 
 

 


Original	Replacement
 Prog -	 CH- / Page-
 Menu	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original		Replacement	
[PRG]	Prog -	[CH PAGE]	CH- / Page-
[MENU]	Menu	[HOME MENU]	Menu / Home
[VOL -]	Vol -	[VOL -]	Vol-
[TV/SAT]	TV/SAT	[LIST SMART]	Smart / List
[TXT]	TXT	[GOTO TEXT]	Text / Goto
[STOP]	Stop	[STEP - FREEZE]	Pause / Step / Freeze
[EXT]	EXT	[MEDIA DISPLAY]	Display / Media
[SAT1]	SAT1 + OK	[SHIFT] + [2]	Shift + 2
[SAT2]	SAT2 + OK	[SHIFT] + [3]	Shift + 3
[TV]	TV + OK	[SHIFT] + [1]	Shift + 1

Original		Replacement	

