 





 

 

 





 

 



 





 

 

 











Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Sleep	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 Still	 Eject / Surround
 7	 7
 8	 8
 9	 9
 Aspect	 Zoom / Size
 -/--	 Guide / EPG / -/--
 0	 0
 Prev. Ch.	 Back / Return

Original	Replacement
 Source	 AV / Input / RDS
 Vol -	 Vol-
 Vol +	 Vol+
 CH -	 CH- / Page-
 CH +	 CH+ / Page+
 Info	 Info / Angle
 Nicam/A2 / Audio	 Audio / Lang I/II
 Auto	 Setup / OPT /
 P.Mode	 Picture / Format
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 S.Mode	 Sound / Title
 Down	 Down
 Exit	 Exit / Cancel / Clear





Original	Replacement
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 I<< / Index
	 >>I / Cancel
	 << / Reveal
	 >> / Hold
	 Txt
	 Play/Pause / Size
	 Play/Pause / Size
	 Stop / Subpage
	 Subtitle
	 Rec Menu
	 CH List
	 FAV
	 USB

Original	Replacement
	 DTV / Radio
	 DTV
	 REC / Repeat

