









 








 
 

 









 





 

 

 
 
 
 
 
 


 
 
 

 
 
 

 












 

 
 








 
 

 
 
 








Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Volume +	 Vol +
Display/▼	 Ch -	 Volume -	 Vol -
Menu/▲	 Ch +	Tuning +	 >>
Return / Repeat	 Text	Tuning -	 <<
 Mute	 Mute	Up	 Up
 1	 1	Left	 Left
 2	 2	 Enter	 Ok
 3	 3	Right	 Right
 4	 4	Down	 Down
 5	 5	 Return / Repeat	 Back
 6	 6	 Info	 Info
 7	 7	 Phono	 Shift + 1
 8	 8	 Tape	 Shift + 2
 9	 9	 CD	 Shift + 3
 0	 0	 Line 1	 Shift + 4
 +10	 Guide	 Line 2	 Shift + 5
 Option	 Options	 Line 3	 Shift + 6

Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Volume +	 Vol +
Display/▼	 Ch -	 Volume -	 Vol -
Menu/▲	 Ch +	Tuning +	 >>
Return / Repeat	 Text	Tuning -	 <<
 Mute	 Mute	Up	 Up
 1	 1	Left	 Left
 2	 2	 Enter	 Ok
 3	 3	Right	 Right
 4	 4	Down	 Down
 5	 5	 Return / Repeat	 Back
 6	 6	 Info	 Info
 7	 7	 Phono	 Shift + 1
 8	 8	 Tape	 Shift + 2
 9	 9	 CD	 Shift + 3
 0	 0	 Line 1	 Shift + 4
 +10	 Guide	 Line 2	 Shift + 5
 Option	 Options	 Line 3	 Shift + 6






 
 

 
 

 


 
 






Original	Replacement	Original	Replacement
Power Receiver		Power	
Sleep		Sleep	
Info		Info	
FM		Smart	
AM		Media	
Tuning+		Ch +	
Tuning-		Ch -	
Preset+		Blue	
Preset-		Yellow	
Vol+		Vol +	
Vol-		Vol -	
Option		Options	
Mute		Mute	
Menu/▲		Menu	
Display/▼		Shift + Info	
Return/Repeat		Back	
Up		Up	

Original	Replacement	Original	Replacement
Down		Down	
Right		Right	
Left		Left	
Enter		Ok	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
+10		Guide	
Enter2		Pre Ch	
Power Source		Text	





Original	Replacement	Original	Replacement
Power Source Line2/Line3	 AV		AV
Phono	 +  Shift + 1		
Tape	 +  Shift + 2		
CD	 +  Shift + 3		
Line 1	 +  Shift + 4		
Line 2	 +  Shift + 5		
Line 3	 +  Shift + 6		
Dock	 +  Shift + 7		
Tuner	 +  Shift + 8		
[A]	 +  Shift + 9		
Power Source	 +  Shift + Power		
Play CD	 Play		
Stop CD	 Stop		
Pause CD	 Pause		
Disc Skip CD	 Rec		
<< CD	 <<		
>> CD	 >>		

I<< CD	 I<<		
>>I CD	 >>I		

