 

 










 
























 

 



 

 

 



















Original	Recharge	Original	Recharge
 Power	 Power	 OK	 OK
 Teletext	 Text / Goto	 Right	 Right
 I-II/Dual	 Audio / Lang I/II	 Down	 Down
 [ <> ] / [ + ]	 TV/Radio /	 Analog/Digital	 Shift + D.Menu / Top Menu
 AV / [ ? ]	 AV / Input / RDS	 EPG	 Guide / EPG / -/-
 Red	 Red / Netflix / Search	 Vol+	 Vol+
 Green	 Green / APP / Repeat	 Mute	 Mute / Dimmer
 Yellow	 Yellow / YouTube / Repeat	 P+	 CH+ / Page+
 Blue	 Blue / Prime Video / Random	 Vol-	 Vol-
 [ ... ] / Subtitle	 Subtitle / EQ	 P-	 CH- / Page-
 [   ] / Dual/Window	 Display / Media	 1	 1
 Cancel	 Exit / Cancel / Clear	 2	 2
 Option	 Setup / OPT /	 3	 3
 Menu Analog	 Menu / Home	 4	 4
 Menu Digital	 D.Menu / Top	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7



