



Original	Rechange	Original	Rechange
Power	Power	Display	Info
VCR/DVD	Media	On Screen/Progressiv	3D
DVD Timer	Green	Top	Shift + Menu
VCR Timer	Red	Menu	Menu
1	1	Set Up	Options
2	2	Return	Back
3	3	Up	Up
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	Enter	Ok
8	8	I<</Previous	I<<
9	9	>>/Next	>>I
0/AUX	0	<</Slow-	<<
X/Cancel	Exit	Play/Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>
Prog/Check	Sleep	Stop/Clear	Stop

Original	Rechange	Original	Rechange
Power	Power	Display	Info
VCR/DVD	Media	On Screen/Progressiv	3D
DVD Timer	Green	Top	Shift + Menu
VCR Timer	Red	Menu	Menu
1	1	Set Up	Options
2	2	Return	Back
3	3	Up	Up
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	Enter	Ok
8	8	I<</Previous	I<<
9	9	>>/Next	>>I
0/AUX	0	<</Slow-	<<
X/Cancel	Exit	Play/Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>
Prog/Check	Sleep	Stop/Clear	Stop





Original		Rechange	
	Pause		Pause
	Rec		Rec
	Remain/Rec	+	Shift + Rec
	↔		Pre Ch
	→		Blue
	Angle/Live Check		AV
	Subtitle		Subt
	TV/DVD-TV/VCR		TV/R
	Mute/Audio		Mute
	PR+		Ch +
	PR- TV/CBL/DVD		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Original		Rechange	


 
 




Original		Rechange		Original		Rechange	
	Power		Power		Prog/Check		Sleep
	VCR/DVD		Media		Display		Info
	DVD Timer		Green		On Screen/Progressiv		3D
	VCR Timer		Red		Top		Shift + Menu
	1		1		Menu		Menu
	2		2		Set Up		Options
	3		3		Return		Back
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		I<</Previous		I<<
	0/AUX		0		>>I/Next		>>I
	X/Cancel		Exit		<</Slow-		<<
	Memory/Mark		Smart		Play Select		Play
	Showview/Video Plus+		Guide		>>/Slow+		>>





Original		Recharge		Original	Recharge
	Stop/Clear		Stop		
	Pause		Pause		
	Rec		Rec		
	Remain/Rec		Shift + Rec		
	↔		Pre Ch		
	→		Blue		
	Angle/Live Check		AV		
	Subtitle		Subt		
	TV/DVD-TV/VCR		TV/R		
	Mute/Audio		Mute		
	PR+		Ch +		
	PR- TV/CBL/DVD		Ch -		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		





Original	Recharge	Original	Recharge
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue

Original	Recharge	Original	Recharge
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue



