



Original		Recharge		Original		Recharge	
	Open / Close		Eject / Surround		i		Info / Angle
	Operate		Power		Guide		Guide / EPG / -/--
	1		1		Rec Mode		Shift + Rec / Rec Mode
	2		2		Input		AV / Input / RDS
	3		3		Timer On / Off		Sleep / Timer
	4		4		Time Shift		Text / Goto
	5		5		HDD		Shift + 7
	6		6		DVD		Shift + 2
	7		7		TV / DVD		TV/Radio /
	8		8		Start Menu		Menu / Home
	9		9		Up		Up
	0		0		Rec List / DVD Top Menu		Smart / List
	-/--		Shift + Guide / EPG / -/--		Right		Right
	CH +		CH+ / Page+		Down		Down
	CH -		CH- / Page-		Original / Playlist / DVD Menu		D.Menu / Top
	C / Erase		Shift + Exit / Cancel / Clear		Left		Left
	Direct		Setup / OPT /		Exit		Exit / Cancel / Clear





Original		Rechange		Original		Rechange	
	Return		Back / Return		>>I / F.Adv II> / Day +		>>I / Preset+
	<< REV		<< / Tune-		Still / Pause		Pause / Step / Freeze
	Set / Enter		OK		Skip Search		Shift + Red / Netflix /
	Play		Play / Slow		Chapter Mark		Fav / Marker / PC
	Green		Green / APP / Repeat		Function		Picture / Format
	Red		Red / Netflix / Search		REC Pause		Shift + Pause / Step /
	Blue		Blue / Prime Video / Random		On Screen Tamper Proof		Vol+
	>> FWD		>> / Tune+		RGB OFF Tamper Proof		Vol-
	Yellow		Yellow / YouTube / Repeat		Display / Back Light		Display / Media
	Slow		Shift + Play /		REC Stop		Shift + Stop /
	REC		Rec / Rec Mode		Direct REC TV		Shift + Eject / Surround
	Angle		Shift + Info / Angle				
	Stop / Live		Stop / Hold				
	Subtitle		Subtitle / EQ				
	Audio		Audio / Lang I/II				
	Replay		Sound / Title				
	I<< / <II F.Adv / Day -		I<< / Preset-				

