



Original	Rechange
 Power	 Power
 Mute	 Mute
 Display	 Shift + Info
 P.Mode	 Shift + Format
 Title	 Shift + Smart
 ST/MO	 Dual
 P.Size	 Format
 Subtitle	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Rechange
 0	 0
 -/--	 Guide
 Return	 Back
 DTV/DR	 TV/R
 Info	 Info
 FAV	 Pre Ch
 EPG	 Shift + Guide
 Audio	 Shift + Dual
 Tv/AV	 AV
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Tv Setup	 Smart
 DVB Menu	 Menu
 DVD Setup	 Media
 Eject	 Eject





Original	Rechange
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Text	 Text
 Hold	 Options
 Index	 List
 Cancel	 Shift + Exit
 Reveal	 D. Menu
 Mix	 Sleep
 Sub Page	 Shift + Subt
 Size	 3D
 Red/Program	 Red
 Green/Intro	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue

Original	Rechange
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Slow/Step	 Shift + Media
 Goto	 Shift + Text
 Angle	 Exit
 Zoom	 Shift + Eject

